

# ZTR Quick Dump Load Hauler



## Package contains:

- 1 - Dump Bed
- 1 - Main Support Frame
- 2 - Attachment Legs
- 2 - Frame Mount Sets
- 1 - Handle
- 1 - Poly Cord
- 1 - Handle Spring
- 1 - 5/16 x 3" Bolt and Locknut



## Package contains: (cont)

- 2 - 1/2 x 1-1/2" Bolts
- 4 - 3/8 x 2-3/4" Bolts
- 4 - 3/8 Flat Washers
- 4 - 3/8 Lockwashers
- 4 - 3/8 Nuts
- 3 - 1/8 x 1-1/4" Cotter Pins
- 2 - 3/4 x 3" Pivot Pins
- 1 - 1/2 x 2-1/2" Pivot Pin



## Assembly Step One:

Slide pivot rod through main support frame and secure with cotter pin



## Assembly Step Two:

Slide each attachment leg into the support frame and finger tighten the 1/2 x 1-1/2" bolts



## Assembly Step Three:

Install frame mounts onto the caster support frame of the ZTR using supplied bolts, nuts, washers, U-brackets and backer plates




## Assembly Step Four:

Attach handle using 5/16 x 3" bolt and nut  
Install spring as shown in drawing above



## Assembly Step Five:

Elevate handle to the up position to lock the dump bed.

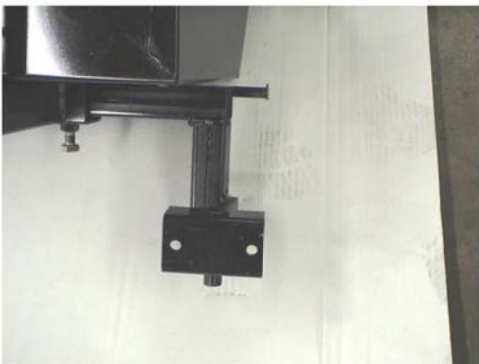

## Assembly Step Six:

Set the assembled Quick-Dump unit into the U-brackets and secure with the supplied 3/4 x 3" pins and cotter pins. Tighten main support bolts on the bottom of the unit.



## Assembly Step Seven:

Attach the supplied poly cord to the back of the dump bed and the release handle.