


# AF-5C ADJUSTA FLEX WHEEL CARRIER

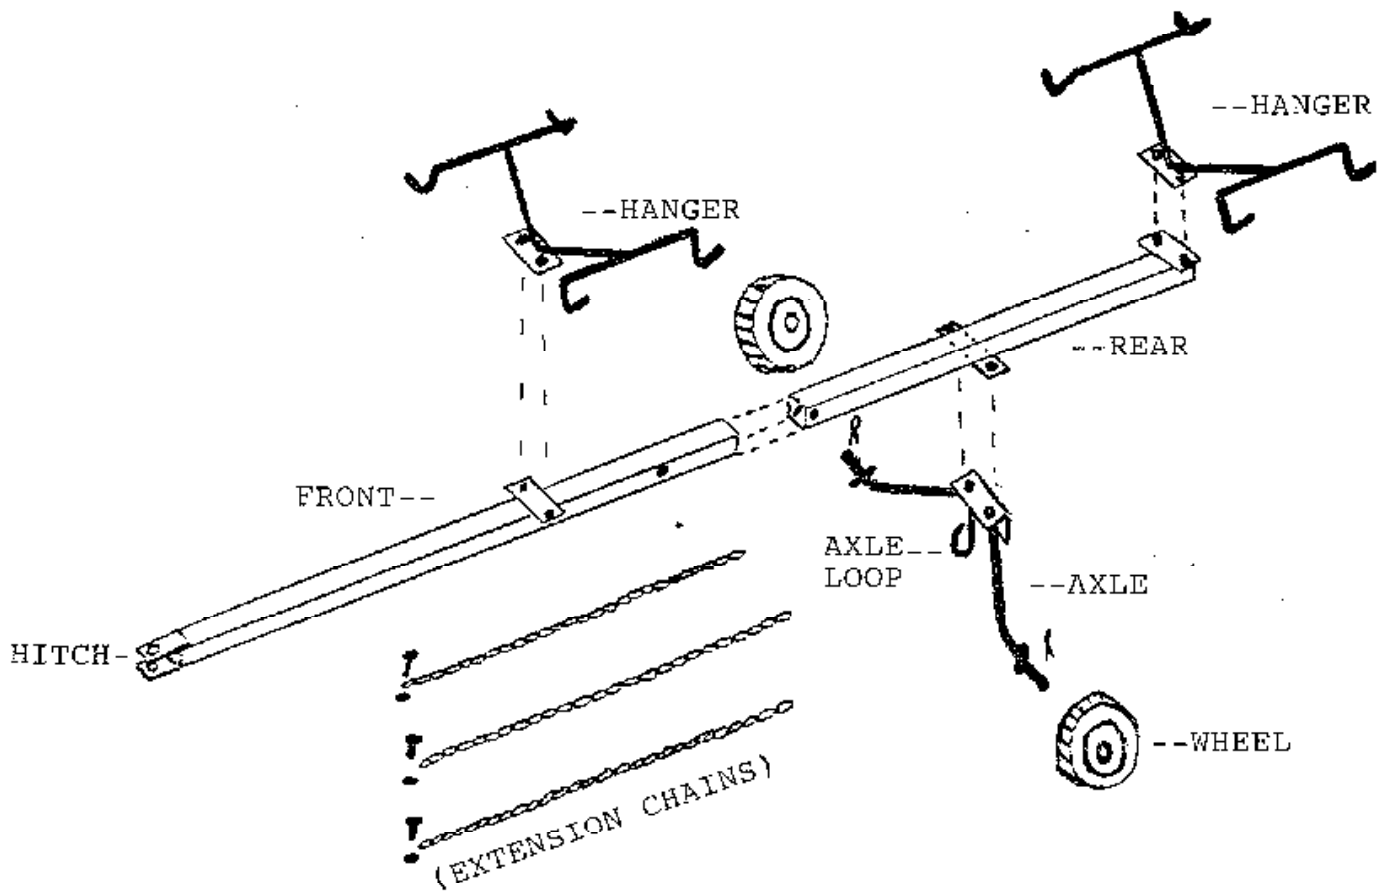

## ASSEMBLY INSTRUCTIONS

**Step 1:** Insert FRONT to REAR and bolt together using 1 each 5/16" x 2 1/4" bolt and lock nut.

**Step 2:** Bolt the two HANGERS onto the FRONT and REAR tubes using 2 each 5/16" x 1" bolt and lock nuts.

**Step 3:** Bolt the AXLE onto the REAR bottom flange using 2 each 5/16" x 1" bolt and lock nuts.

**Step 4:** Install WHEELS onto the AXLE and secure with 3/4" washer and cotter pin.

**NOTE:** See AF-5 Harrow instructions for installing extension chains, when harrow is used in conjunction with the wheel carrier.