


SPIDER™ Rotary Conditioner

Model RC-4

(Wheeled Transport Model)

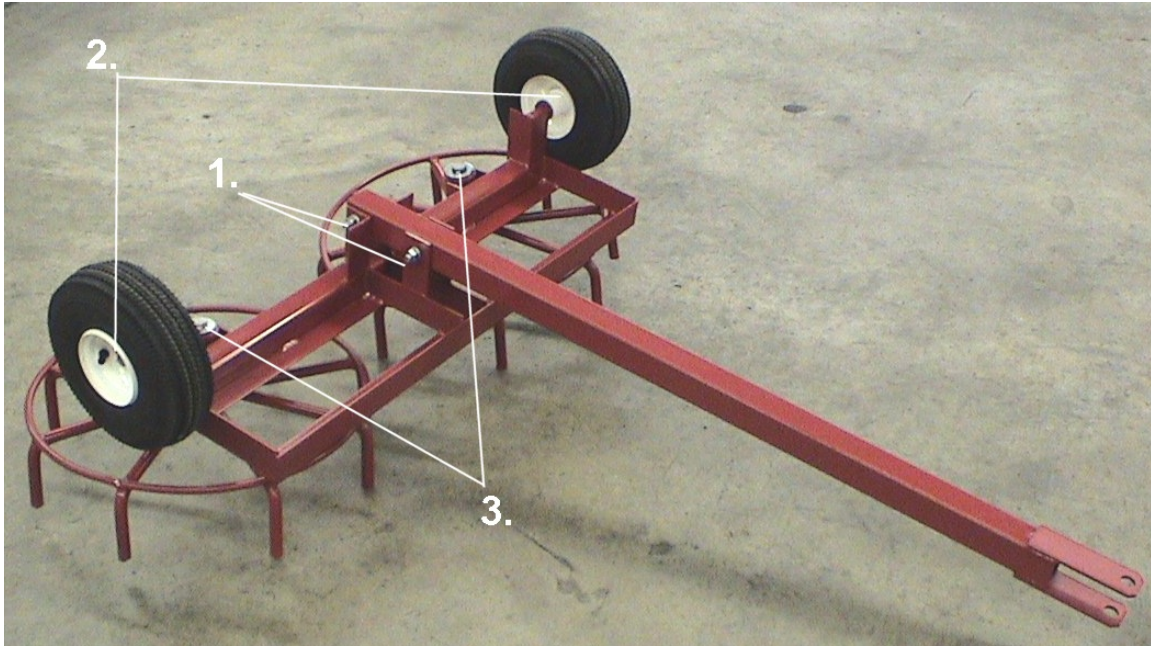

- 1) Bolt tongue onto frame using 2- 3 ½" x ½" bolts, nuts and lockwashers.
- 2) Install transport wheels using 2- ¾" washers and 2 cotter pins.
- 3) Turn the frame over with the transport wheels on the ground and install the rotor shafts through the bearing housing from the top. Install 1- 1" washer on top of the bearing housing and install cotter pin and secure.

Note*** Make sure to use the enclosed lockwashers when attaching all bolts. This helps to prevent vibration from loosening the bolts over time.

When attaching the unit to the tractor- Ensure the frame of the unit is setting level to the arena surface. The rotors are pre-set to the correct angle for maximum disbursement of the material. If necessary, loosen bolts Item 1, hitch to pulling vehicle and adjust tongue angle.